

Method of output voltage adjusting(External circuit)

Voltage between "-S" and "VB" is proportional to the output voltage.
It is possible to increase(decrease) the output voltage by adjusting that voltage.

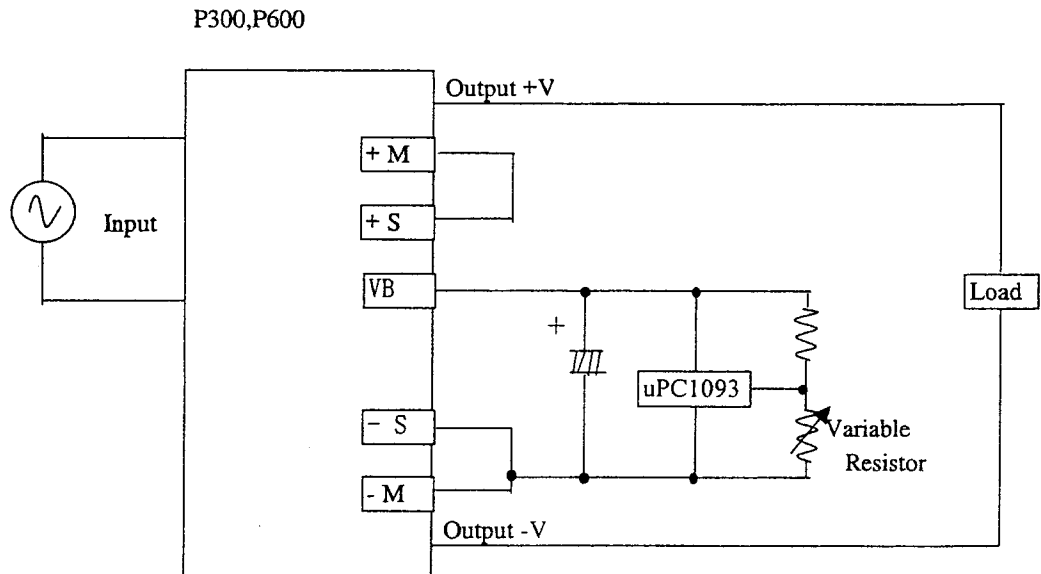


Fig1. External circuit

You have to keep the output voltage range $\pm 10\%$.